er irons

m this
use it
arefully
ron.

me Ap-
his iron
normal
week).

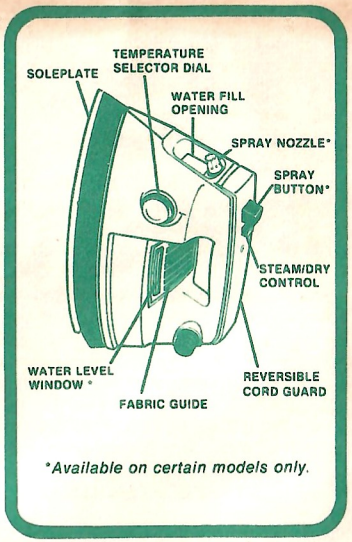

*Available on certain models only.

RUCTIONS

te another high wattage appliance on the same cir-

ary, a 10 ampere cord should be used. Cords rated
ould be taken to arrange the cord so that it cannot

AFEGUARDS

ety precautions should always be follow-

se.
ctric shock, do not immerse the iron in

d to OFF before plugging or unplugging
disconnect from outlet; instead, grasp

surfaces. Let iron cool completely before
around iron when storing.
ectrical outlet when filling with water or

aged cord or if the iron has been dropped
f electric shock do not disassemble the
uthorized service center for examination
ly can cause an electric shock hazard

8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down—there may be hot water in the reservoir.

SAVE THESE INSTRUCTIONS

IMPORTANT - READ BEFORE IRONING

In initial usage your iron may smoke for a short time; this is normal . . . the smoking will quickly disappear. This smoking in no way reflects an electrical defect or hazard.

The final buffing operation on new irons sometimes leaves a residue in the steam vents. Therefore, in order to prevent spotting of clothing, hold the iron over the edge of the ironing table, allowing it to steam freely for a minute . . . then iron over an old cloth a few times prior to ironing.

GENERAL USE

HOW TO FILL

1. Be sure the iron is unplugged from the electrical outlet before filling with water.
2. Turn TEMPERATURE SELECTOR DIAL to the "OFF" setting and place the iron in an upright position.
3. Pour about 6 ounces (177ml) of water from a measuring cup into the WATER FILL OPENING.
4. Refill when water level reads ¼ full.

Tap water may be used at any time. All tap water, however, contains minerals which may be deposited on the inside of your iron. (See TO CLEAN THE INSIDE)

If distilled water is used, the iron must be seasoned by using tap water the first four times it is filled. After that, tap water should be used once a month. This is necessary to coat the steam chamber for proper performance.

WATER LEVEL WINDOW
(AVAILABLE ON CERTAIN MODELS ONLY)

When the iron is placed in an upright position the WATER LEVEL WINDOW indicates the amount of water in the reservoir.

IRONING TODAY'S FABRICS

STEAM IRONING

Be sure the water reservoir is filled as described above. Set TEMPERATURE SELECTOR DIAL on the RED ZONE. Wait approximately 2 minutes until the selected temperature is reached.

Move STEAM/DRY BUTTON on the top of the iron up to the STEAM position. This will start the steam flow. To maintain maximum steam supply, periodically push the STEAM/DRY BUTTON up and down a few times to clean out the water passage.

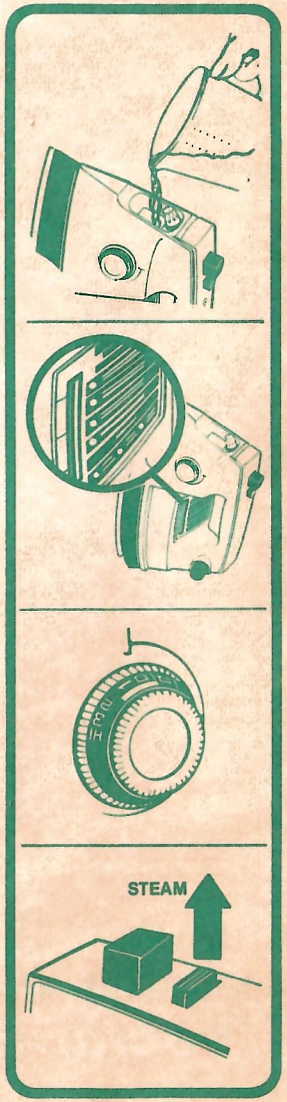

Steam stops automatically whenever the iron is placed in the upright position. Steam can also be stopped by pushing STEAM/DRY BUTTON down to the DRY position.

DRY IRONING

Push STEAM/DRY BUTTON on the top of the iron down to the DRY position. Set TEMPERATURE SELECTOR DIAL for the desired temperature and wait 2 minutes.

NOTE: Empty water from reservoir if dry ironing more than a few minutes.

USING THE SPRAY (AVAILABLE ON SOME MODELS)

Before using the spray, check the garment label for ironing instructions because some fabrics may spot or stain with moisture. The spray may be used with steam or dry ironing and on any setting of the TEMPERATURE SELECTOR DIAL.

Press the SPRAY button. Press vigorously for a fine spray. This spray is particularly helpful in removing stubborn wrinkles at seams and collars and on fabrics where extra dampening is needed.

HOW TO REVERSE CORD POSITION

Unplug iron from the outlet. Remove screw from rear coverplate. Remove coverplate, lift cord guard out, and reverse the position of the cord guard. Push cord guard back in place on the handle. Replace coverplate and screw.

HOW TO CARE FOR YOUR IRON

TO CLEAN THE OUTSIDE

Starch and other residue may be easily removed from the soleplate with a damp cloth and a paste made of baking soda mixed with water. A special finish is put on the soleplate to ensure smooth ironing. To avoid scratching the finish never use a metallic pad to clean the soleplate and never place the iron on a rough surface. Stand the iron in an upright position while cleaning it.

TO CLEAN THE INSIDE

Hold the iron over the edge of the ironing table, allowing it to steam freely for a minute. It is good practice to follow this suggestion prior to ironing to prevent spotting of clothing from lint or dust.

TO EMPTY

This iron has a non-corrosive water reservoir and actually never needs to be emptied. To empty the iron, however, tilt it slowly to a nose-down position with the steam vents facing away from you. The water will run out the WATER FILL OPENING.

FOR STORAGE

Turn TEMPERATURE SELECTOR DIAL to "OFF" and unplug the iron from the wall outlet. Allow the iron to cool completely before putting it away.

It is not necessary to empty the iron if it is stored in an upright position with the STEAM/DRY BUTTON set on DRY.

Several undesirable conditions may result from storing the iron flat on its soleplate when there is water in the reservoir. The soleplate may stain or corrode so that the ironing surface is ruined. In addition, the steam vents may become clogged with hard water mineral deposits which will prevent the iron from steaming properly. Therefore, NEVER STORE THE IRON FLAT OR IN A BOX IF WATER IS STILL IN THE RESERVOIR.